PANDUAN USER MANUAL PERUBAHAN USER & PASSWORD WIFI DI PERANGKAT ZTE

Berikut langkah-langkah dalam melakukan perubahan user dan password WiFi di perangkat ZTE :

<u>Step 1</u>

- Gunakan browser dan masukan URL 192.168.1.1 akan muncul username & password
- Username : admin
- Password : admin

ZTE		F609
	Please login to continue ウ中文	
	Username admin	
	Password Login	
	©2008-2016 ZTE Corporation. All rights reserved.	

<u>Step 2</u>

- Pilih "Network"
- Pilih "SSID Setting"
- Pada kolom "SSID Name" anda dapat merubah nama dari WIFI ONT

ZTE				F609			
+Status	Path:Network-WLAN-SSID Settings		<u>中 文</u>	Logout			
-Network +WAN							
-WLAN Basic SSID Settings Security Access Control List Associated Devices WDS WMM WiFi Restrictions WPS +LAN +PON +Routing(IPv4)	Choose Hide Enable SSID Isol Maximum Cl SSID N Pri	SSID SSID1 SSID ssID ation ients 32 ame ZTE-d57c7f ority 0	✓ (1 ~ 32) (1 ~ 32 characters)]			
+Security							
+Application							
+Administration +Help							
			S	Submit Cancel			
	©2008-2016 ZTE Corporation. All rights reserved.						

<u>Step 3</u>

- Pilih "security"
- Pada kolom "WPA Passphrase" anda dapat merubah Password dari WIFI ONT
- Pilih "Submit" apabila sudah melakukan perubahan

775		
ZIE		F609
+Status	Path:Network-WLAN-Security 中文	Logout
-Network		
+WAN		
-WLAN	Choose SSID SSID1	
Basic		
SSID Settings	Authentication Type WPA/WPA2-PSK	_
Security	WPA Passphrase 28ff3ed5 (8 ~ 63 characters)
Access Control List	WPA Encryption Algorithm AES	
Associated Devices		
WDS		
WMM		
WiFi Restrictions		
WPS		
+LAN		
+PON		
+Routing(IPv4)		
Port Locating		
+Security		
+Application		
+Administration		
+Help		
2		
		Submit Cancel
_		Cabinic Cuncer
	©2008-2016 ZTE Corporation. All rights reserved.	